




# EU07784 | #NOFILTER face mask

## Ultra-protecting and moisturizing face mask for a dewy skin

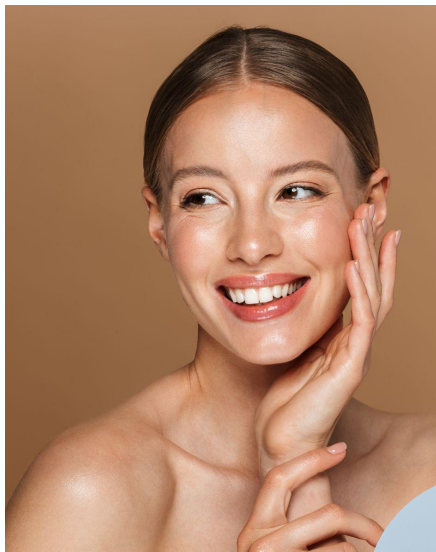

NATURALITY PROFILE according to ISO 16128 norm



Moisturizing gel mask

Protection against pollution

Skin barrier strengthening

\* Data provide from OECD tests, QSAR calculations, products SDS and literature.

<b>A</b>	Aqua/water Propanediol	Qs 100% 5.00%
<b>B</b>	<b>SEPIMAX ZEN™</b>	<b>3.00%</b>
<b>C</b>	<b>CODIAVELANE™ BG PF</b> <b>OLIGOGELINE™ PF</b> <b>CONTACTICEL™</b> <b>HYDRACHRYSUM™</b> <b>SAKADIKIUM™</b>	<b>2.00%</b> <b>2.00%</b> <b>1.00%</b> <b>1.00%</b> <b>3.00%</b>
<b>D</b>	Preservative Fragrance Colorant Yellow (sol 0,1%) Colorant Rubis (sol 0,1%) Calcium aluminium borosilicate - Silica - Titanium dioxide - Tin oxide	1.00% 0,05% 0,25% 0,09% 0,05%

**Glittery aqueous pink gel / Packaging: Tube**

**pH:** 5.02 / **VISCOSITIES:** **1M at RT:** 120,000 mPa.s M7V5  
**Recovery at RT (after 1M at 45°C):** 120,000 mPa.s M7V5  
**STABILITY:** M at RT, 45°C, cycles -5°C/+40°C.


**FORMULATION ADVICES: Pilote - 5 kg - Trimix**

Introduce water and propanediol in the tank. Weigh Sepimax Zen and add it progressively in the tank. Mix with defloculator, rotor stator and scrapers until obtain a homogeneous gel.

Weigh actives of the phase C and add them one by one, mixing between each addition.

Weigh ingredients of phase D and add them one by one, mixing between each addition.

Regulate the pH between 5 and 5,5.

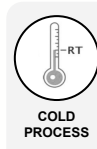

**A second-skin effect to protect your skin from pollution, while keeping it moisturized.**

*For a dewy skin without a filter!*

**A mask with a gel texture thanks to SEPIMAX ZEN™ (Polyacrylate Crosspolymer-6)** This pre-neutralized powder polymeric thickener provides the **gel texture of this face mask**. It has a maximum resistance to electrolytes thanks to its high associative behavior. Efficient on a wide range of pH from 3 to 8, it is able to formulate **transparent** aqueous gels. This polymer also provides a **rich, velvet and elegant skin feel**.

**A protective, restorative and moisturizing mask with:**

**OLIGOGELINE™ PF working as a second skin to protect it.** (*Chondrus Crispus Extract*)

It forms a **natural non occlusive shield** to protect from pollution effects. 78% of microparticles are removed. Protection is about 43% versus non treated skin.

**CODIAVELANE™ BG PF helps to reinvigorate the skin barrier.** (*Butylene Glycol - Aqua/Water - Codium Tomentosum Extract*). It also reinforces **skin hydration** thanks to its richness in marine sugars.

**CONTACTICEL™ has a protective effect against pollution on skin.** (*Aqua / Water and Butylene Glycol and Hydrolyzed Rhodophyceae Extract*) It has been shown to **limit excessive sebum production** and to reduce the ozonolized squalene. It also allows a **protection** of the skin against ozone.

**HYDRACHRYSUM™ brings long term moisturization to the skin.** (*Aqua/Water - Glycerin - Helichrysum stoechas Callus Culture Lysate*) It **increases the number of markers of hydration** acting as extracellular water tanks (+82% vs placebo) while improving the **barrier function** of the skin.

**SAKADIKIUM™ acts as a multiprotector on the skin.** (*Aqua / Water and Glycerin and Hedychium Coronarium Root Extract*). It **protects the lysosomal network** by stimulating the cells autophagy. Sakadikium™ helps to **reduce the effects of pollution** on the skin.

**ADDITIONAL INGREDIENTS:** Propanediol - Zemea (IMCD) / Preservative benzyl alcohol & dehydroacetic acid - Geogard 221 (LONZA) / Fragrance: Parfum Orchidee (EXPRESSION PARFUMEE) / Colorant CI 19140 : Unicert Yellow.5 (SENSIENT) / Colorant CI 14720 : Rouge rubis (SENSIENT) / Calcium aluminium borosilicate - Silica - Titanium dioxide - Tin oxide : Ronastar golden sparks (MERCK)

**A formula related to IRL BEAUTY concept**

More informations available on [seppic.com](http://seppic.com)

**SEPPIC**

All information contained herein is intended merely to demonstrate the utility of Seppic products, and should not be construed as granting license to practice any compositions or methods covered by a patent or a patent application or efficacy or tolerance. All information contained in this specific technical documentation is believed to be accurate and has been set up by Seppic according to its own described methods and processes. Seppic however does not assume any liability or risks involved in the use of its products for the preparation and the assessment of the hereinabove formulation since the condition of use are beyond its control. Seppic customer must insure that the duplication of the hereinabove formulation is not infringing any intellectual property rights and that it complies with any regulatory status. Formula only for demonstration purposes.

**Air Liquide**  
HEALTH CARE

A company